

Ex. No 1: Evidence Acquisition Using Access Data FTK Imager

Date:

Description

Forensic Toolkit or FTK is a computer forensics software product made by Access Data. This is a Windows based commercial product. For forensic investigations, the same development team has created a free version of the commercial product with fewer functionalities. This FTK Imager tool is capable of both acquiring and analyzing computer forensic evidence.


The evidence FTK Imager can acquire can be split into two main parts. They are:

- Acquiring volatile memory
- Acquiring non-volatile memory (Hard disk)

There are two possible ways this tool can be used in forensics image acquisitions:

- Using FTK Imager portable version in a USB pen drive or HDD and opening it directly from the evidence machine. This option is most frequently used in live data acquisition where the evidence PC/laptop is switched on.
- Installing FTK Imager on the investigator's laptop.

In this case the source disk should be mounted into the investigator's laptop via write blocker. The write blocker prevents data being modified in the evidence source disk while providing read-only access to the investigator's laptop. This helps to maintain the integrity of the source disk.

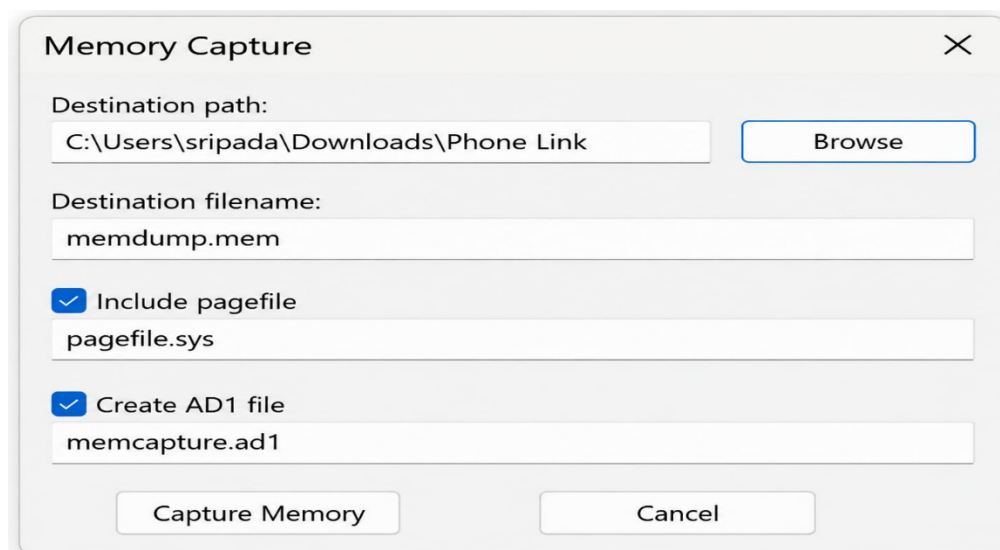

Acquiring volatile memory using FTK Imager

The FTK Imager tool helps investigators to collect the complete volatile memory (RAM) of a computer. The following steps will show you how to do this.

Open FTK Imager and navigate to the volatile memory icon (capture memory).


NOTE: This tool provides options to include pagefile and AD1 files when acquiring the volatile memory.

Pagefile: The pagefile (pagefile.sys) is used in Windows operating systems as volatile memory due to limitation of physical random-access memory (RAM). It is located under the “C” partition ready to use as volatile memory when the existing RAM capacity is exceeded.

So this file can have quite a bit of valuable data when considering the volatile memory. Therefore, it is recommended to capture and collect this file in the acquisition.

AD1 file: AD1 is the FTK imager image file. The investigator has the option to create an AD1 file for later use.


Clicking the “capture memory” button will start acquiring the volatile memory.

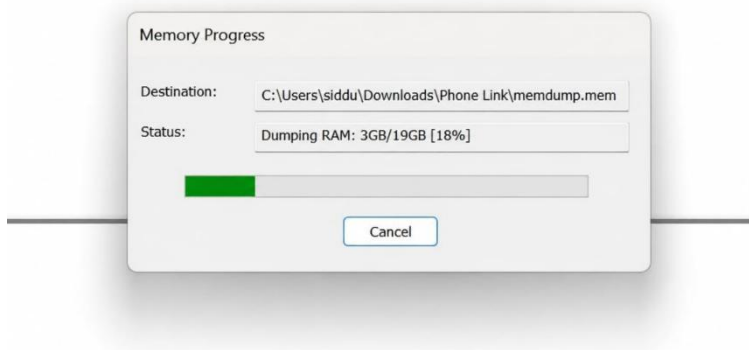


NOTE: Once the acquisition has completed, the destination folder will have the acquired memory with the file extension of “.mem”.


Acquiring non-volatile memory (Disk Image) using FTK Imager

As previously stated, this same tool can be used to collect a disk image as well. Open FTK Imager and navigate to “Create Disk Image”.

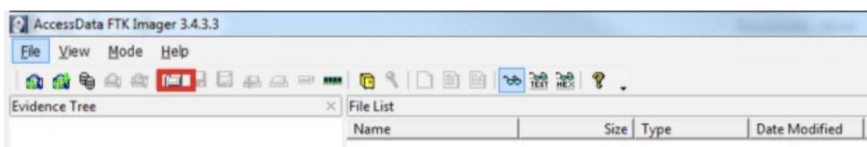

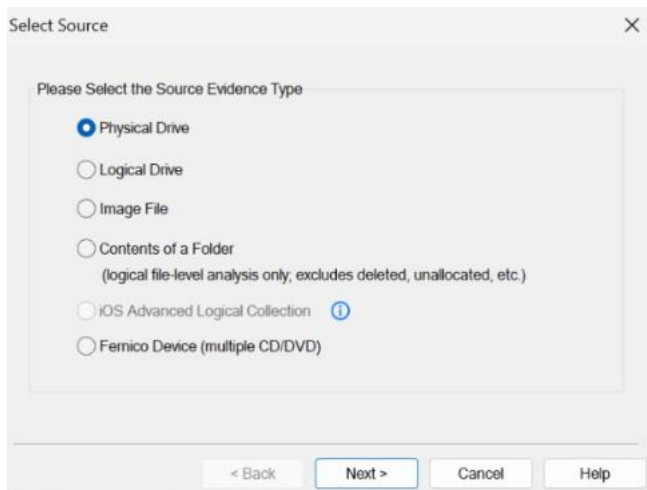

Now select the source that you need to acquire.

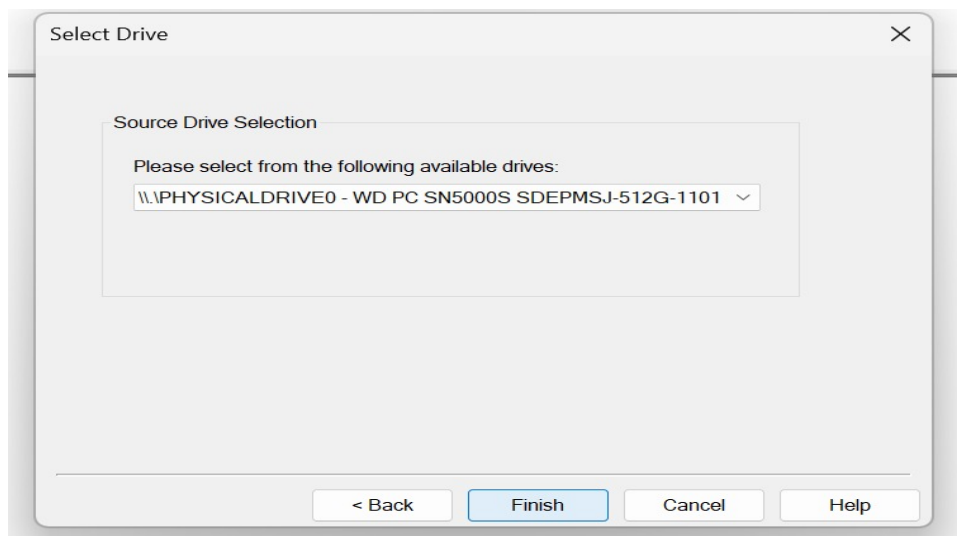

NOTE: FTK Imager is capable of acquiring physical drives (physical hard drives), logical drives (partitions), image files, contents of a folder, or CDs/DVDs. Investigators can connect external HDDs into the collection computer

via write blocker and use the “logical drive” option to select the mounted HDD as a partition. Collecting Physical Drives

Select the “Physical Drive” option.

Select the drive you need to acquire and click “Finish”.


Raw (dd): This is the image format most commonly used by modern analysis tools. These raw file formatted images do not contain headers, metadata, or magic values. The raw format typically includes padding for any memory ranges that were intentionally skipped (i.e., device memory) or that could not be read by the acquisition tool, which helps maintain spatial integrity (relative offsets among data).

SMART: This file format is designed for Linux file systems. This format keeps the disk images as pure bitstreams with optional compression. The file consists of a standard 13-byte header followed by a series of sections. Each section includes its type string, a 64-bit offset to the next section, its 64-bit size, padding, and a CRC, in addition to actual data or comments, if applicable.

E01: this format is a proprietary format developed by Guidance Software's EnCase. This format compresses the image file. An image with this format starts with case information in the header and footer, which contains an MD5 hash of the entire bit stream. This case information contains the date and time of acquisition, examiner's name, special notes and an optional password.

AFF: Advance Forensic Format (AFF) was developed by Simson Garfinkel and Basis Technology. Its latest implementation is AFF4. The goal is to create a disk image format that does not lock the user into a proprietary format that may prevent them from being able to properly analyze it.

Now enter the case details.

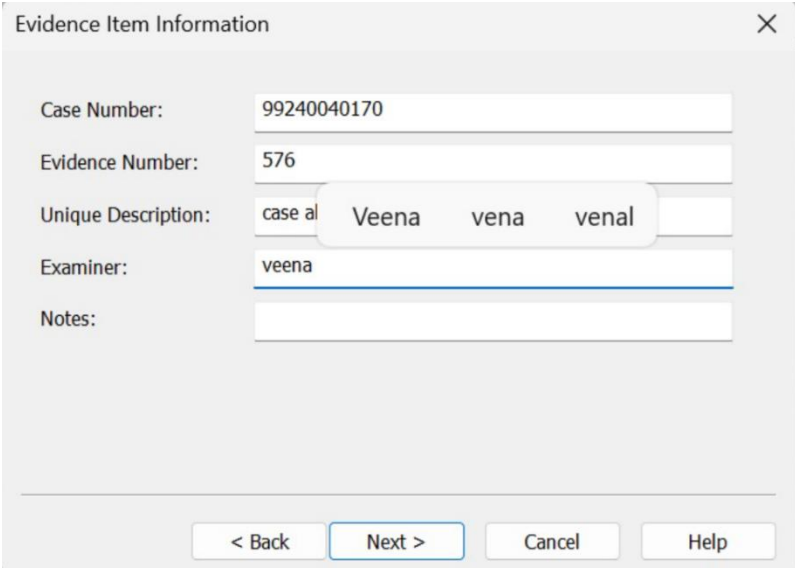

The image shows a software dialog box titled "Evidence Item Information" with a close button (X) in the top right corner. The dialog contains several input fields and a list box. The "Case Number" field is filled with "99240040170". The "Evidence Number" field is filled with "576". The "Unique Description" field contains a list box with four items: "case al", "Veena", "vena", and "venal", where "Veena" is currently selected. The "Examiner" field is filled with "veena". The "Notes" field is empty. At the bottom of the dialog, there are four buttons: "< Back", "Next >", "Cancel", and "Help". The "Next >" button is highlighted with a blue border.

Case Number:	99240040170
Evidence Number:	576
Unique Description:	case al, Veena, vena, venal
Examiner:	veena
Notes:	

< Back Next > Cancel Help

Add an image destination (where the image file will be saved), image file name and fragment size.


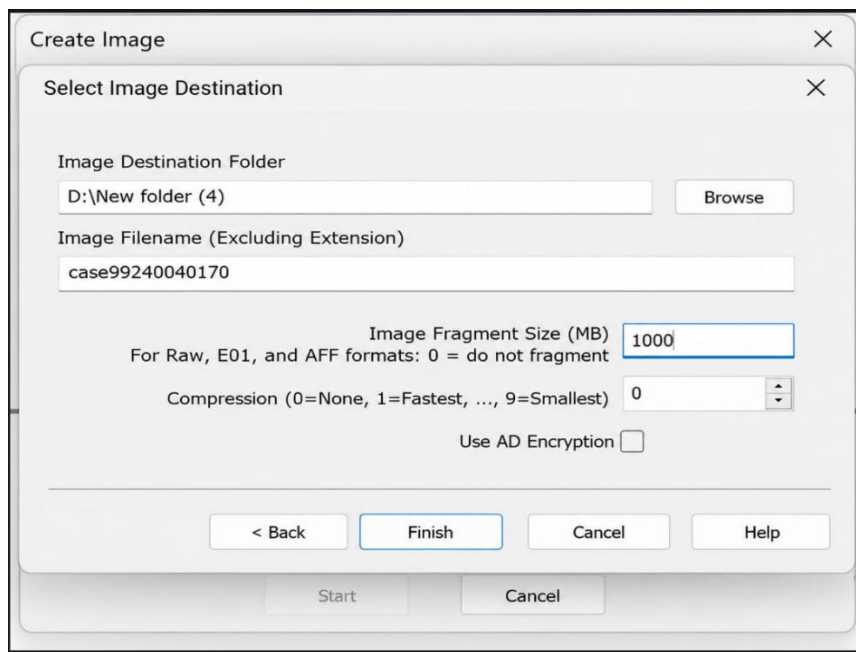


Image Fragment Size (MB): this option will separate the image file into multiple images and save them in the same destination. If you need only one file instead of creating multiple fragmented images, you must set the image fragment size to “0”.

Select the “verify images after they are created” option. This will verify the hash values once the image has created. In order to ensure integrity, it is recommended to use this option. However, this will increase the time taken to acquire your evidence, especially if you’re dealing with a large disk image size.

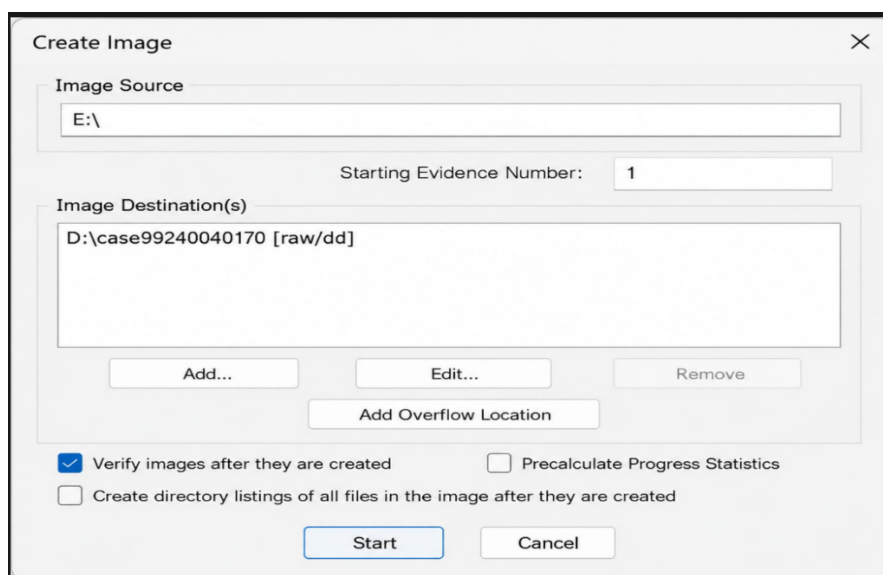

Click “start” to start acquiring.

Once acquiring is complete, it will create a text file including all the information it has acquired.

Creating Image...

Image Source:

E:\

Destination:

D:\case99240040170

Status:

Image created successfully

Progress

Elapsed time:

0:00:10

Estimated time left:

Image Summary...

Close

Drive/Image Verify Results	
Name	case1.001
Sector count	3379200
MDS Hash	
Computed hash	6e7cc3db186809914c00769fe74a34e
Report hash	6e7cc3db186809914c00769fe74a34e
Verify result	Match
SHA1 Hash	
Computed hash	e1874007570ce632ae0e3a1786baef0ed69319
Report hash	e1874007570ce632ae0e3a1786baef0ed69319
Verify result	Match
Bad Blocks List	
Bad block(s) in image	No bad blocks found in image
Close	

Hash values are matched.

Rubrics

Criteria & Marks Assigned	Mark Allotted	Mark Awarded
1. GitHub Activity & Submission Regularity	3	
2. Application of Forensic Tools & Practical Execution	3	
3. Documentation & Reporting	2	
4. Engagement, Problem-Solving & Team Collaboration	2	
Total	10	

Result

The forensic image acquisition was completed successfully using FTK Imager. The verification process confirmed that the hash values are matched, indicating that the acquired forensic image maintains the integrity of the collected evidence. The matching hash values provide assurance that the evidence was not altered during the acquisition process.

Hence, the evidence acquisition and verification process was completed successfully, and the integrity of the acquired forensic image was verified.